

SWEDX

User's Guide

SS-42K15

SS-50K15

SS-58K15

SS-65K15





SWEDX wave



SWEDX TV-Stand

 


SWEDX Soundbar



SWEDX Direct

SWEDX offers a wide range of LED-TVs and digital signage products and its accessories. For more information please visit www.swedx.com

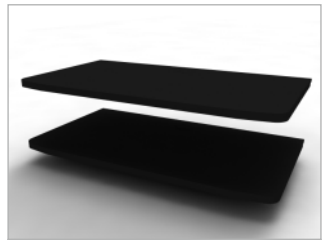


SWEDX shelves



SWEDX Blade



 SWEDX Matrix Screens

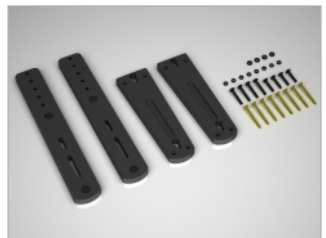

Wooden Wall-mount

INDEX	Page
Introduction	4
Safety precaution	4
Basic operation	5
Contents	6
Control buttons	6
Inputs	6
Remote Control Notice	7
Remote control buttons	8
Main Operations	9
Volume Control	9
OSD Menu Operations	9
OSD Menu Structure:	9
Menu > OPTION	10
Menu > Channel	11
Menu > Picture	15
Menu > Sound > Sound	15
Menu > Time	16
USB Media Player	17
Supported file formats and codecs	18
Text-TV / Teletext	19
Product base assembly	20
Wall mount assembly	21
Troubleshooting	22
Warranty and Service	23
How to get service	24
Limitation of liability	24

Introduction

Thank you for choosing SWEDX LED/LED-TV. Please read this manual thoroughly before operating the product. Make sure the display was not damaged in transit. Should the product be damaged, please contact your dealer and do not install it. Check that you have all the accessories according to the model.

Safety precaution

- Do not place the product on unstable places, from which it may fall off
- Do not expose the product to extreme temperature and humid environment
- Avoid subjecting the product to direct sunlight and other heat sources
- Do not put the product into any liquid
- Do not put anything inside the product, or place water container on top of the it
- In thunder rainy days (especially with lightening), please unplug the power and antenna cables
- Do not step on the power cable, or tangle them together
- Avoid overload of the exterior electric outlet to prevent fire hazard of electric shock
- Clean the product with dry and soft fabric
- If your product is broken, do not repair it by yourself, but contact the maintenance personnel
- If the remote control is left unused for a longtime, please take the batteries out and store them in dry places
- Avoid dropping the remote control
- If the product is installed for exhibition purpose, please do not place the overheated part on the ground or carpet to prevent accident
- The apparatus shall not be exposed to dripping or splashing and that no object filled with liquids, such as vases, shall be placed on the apparatus
- Where the MAINS plug or an appliance coupler is used as a disconnect device, the disconnect device shall remain readily operable
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like
- Excessive sound pressure from earphones and headphone can cause hearing loss

Please install the product at proper position, such as wall or ceiling. Please install it under the guidance of professional staff.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference

2. This device must accept any interference received, including interference that may cause undesired operation

Please disconnect the power cord if this equipment will not be used for a long time.

Precautions When Displaying a Still Image

A still image may cause permanent damage to the screen

- Do not display a still image on the screen for more than 2 hours as it can cause screen image retention. This image retention is also known as "screen burn". To avoid such image retention, reduce the degree of brightness and contrast of the screen when displaying a still image
- Watching the screen in 4:3 format for a long period of time may leave traces of borders displayed on the left, right and center of the screen caused by the difference of light emission on the screen. Playing a DVD or a game console may cause a similar effect to the screen. Damages caused by the above effect are not covered by the Warranty.
- Displaying still images from Video games and PC for longer than a certain period of time may produce partial after-images. To prevent this effect, reduce the 'brightness' and 'contrast' when displaying still images



WARNING

To prevent the spread of fire, keep candles or other open flames away from this product at all times

Basic operation

- Use AC 100-240V 50~60 Hz power outlet for the product power supply.
- If the screen of the product is not on, please press the power button on the remote control or on the product.
- If you want to shut off the product temporary, please press the power button on the remote control.
- If you want to shut off the product completely, please disconnect the power cable.
- In all modes except PC mode, the product will enter idle state if there is no signal input within 3 minutes.
- In PC state, the product will enter idle state if there is no signal input within 2 minutes.
- The setting and tuning of picture and sound will be saved when the product is shut off, which will be working in the pre-shut off state when the product is turned on again.
- If PC signal source is used, please first set the resolution of the PC display card as the following modes:
For HDMI (3840x2160 @ 30Hz)
For PC (1920 x 1080 @ 60Hz)
- If there is progressive output of the signal used by the user, signal source with progressive output is recommended.

Preparation

- Put the product on a stable surface.
- Do not fix the product with others fixations than those provided or suggested by the manufacturer.
- If you have a wall mount, check that it is steady.
- Do not place any material on the product.
- Do not block or cover the ventilation openings on the product.
- The product must be plugged with a tension source of 110-240 volts and 50~60 Hz.
- Power cord and cables must be properly routed and protected to prevent from stepping on them.
- Keep the power cord away from any heat source. Possible fire hazard.

Heating sources and humidity

- Keep the product dry and away from humidity.

 
- Keep the product away from heat sources.

Cleaning and maintenance

- Unplug the product before cleaning it. Do not use solvents or liquids to clean the product.
- Only clean the product with a soft and dry fabric.
- In case of troubleshooting, do not use spare parts other than those suggested by the manufacturer. Using inadequate spare parts can lead to electric shocks, short-circuits fire or others incidents. Please contact a technical authorized by SWEDX brand.

Departure in holidays

- Unplug the product during lightning storms or when unused for long periods of time.

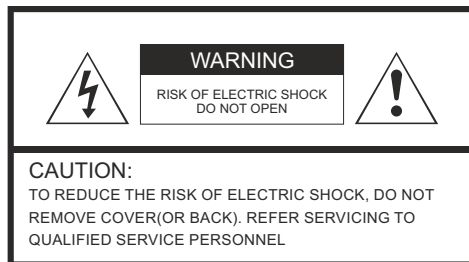
 






WARNING:

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE.

Contents

Included items:

		
2 x CR2025 Battery	Notice	AC Cable
		
Remote Control	LED/LED-TV	Base + Screws

CAUTION

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.



CR 2025 Battery

CAUTION

The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.



CR 2025 Battery

Inputs

1. YPBPR

Input for Component/YPBPR

2. CI-Module

Input for CA-module (card reader)

3. AV

Input for audio/video sources, 3.5 mm plug
**Component/YPBPR and AV shares the same audio input*

4. USB

Input for USB Media Player/Firmware upgrade

5. HDMI 1,2 and 3

Input 1,2 and3 for HDMI sources

6. Power Input

Input for 100-240 V power 50~60Hz

7. Headphone

Output for headphone devices

8. PC Audio

Input for PC audio when PC input is connected

9. PC

Input for PC or VGA sources

10. SCART

 
Input for SCART sources

11. DTV/TV

Input for DVBT/T2/C and analog TV signal

12. Digital Audio

Output for digital audio signal (coaxial)

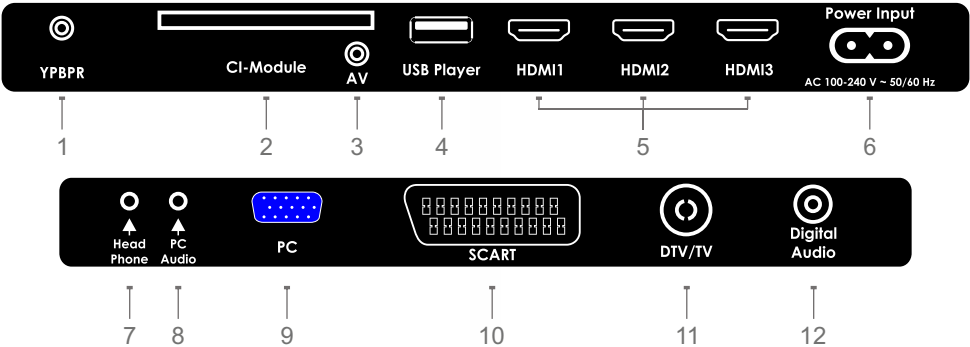

Remote Control Notice

The remote control included is based on 2.4 GHz and infrared. To switch between 2.4 GHz and infrared do the following:

Press **1** + **3** and hold for 5 seconds.



The red LED lamp will flash and alter the current mode. When pressing any key on the remote control the correspondent LED lamp will lit. In 2.4 GHz mode the LED lamp will lit red and in Infrared mode the LED lamp will lit blue.

When the remote is in 2.4 GHz mode it can be used without targeting the screen because the receiver is built in. Each screen has a paired remote control meaning that if you have several screens the remote control will apply to the paired screen only and will not apply to any other screen.

If for some reason you need to pair the remote with the screen do the following:

 
1. Connect the screen to power outlet
2. Press **0** + **OK** buttons on the remote control simultaneously for about 4 seconds

The red lamp on the top edge of the remote will flash indicating that the remote is paired with the screen.



Remote control buttons

1. On/Off button
2. Number buttons for direct channel access
3. Display additional information
4. List TV-channels
5. EPG (Electronic Program Guide)
6. Navigation button *UP*
7. Navigation/adjust button *LEFT*
8. Menu display. In OSD sub-menu press to access previous menu
9. Available sources selection
10. Picture freeze
11. Volume increase
12. Volume decrease
13. Enter sleep mode in certain chosen time
14. Start/Pause play, Start/Paus time shift/alter Teletext mix
15. Stop play/activate Teletext
16. Fast forward/Teletext index
17. Fast backward/ Teletext cancel
18. Fast-text topic selection in Teletext *GREEN*
19. Fast-text topic selection in Teletext *RED*
20. Choose Audio/ language in DTV/USB media player
21. Aspect Ratio selection
22. Shortcut to USB
23. Shortcut to HDMI1,2,3
24. Mute the built-in speakers
25. Previous TV channel in DTV/TV
26. Display favorite channels list
27. Confirm/activate button
28. Navigation/adjust button *RIGHT*
29. Exit the OSD
30. Navigation button *DOWN*
31. Next channel. When the channel list is displayed, it scrolls down to next page in the list
32. Previous channel. When the channel list is displayed, it scrolls up to previous page in the list
33. Instant Recording/ Teletext size selection
34. Display Recorded List/Hold Teletext
35. Previous Title/Display time in Teletext
36. Next Title and Reveal Teletext
37. Fast-text topic selection in Teletext *Yellow*
38. Fast-text topic selection in Teletext *Blue*
39. Activate subtitles in DTV/USB media player
40. Alter TV/Radio Channels mode
41. Shortcut to AV
42. Shortcut to DTV/TV

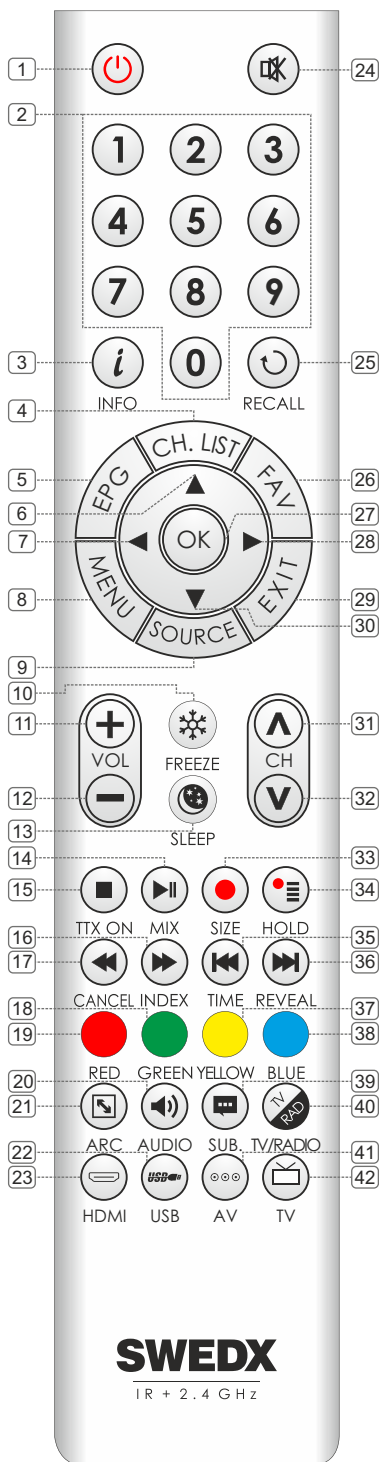

Main Operations

Turning On And Off



Press Power button on the remote control or the On/Off button on the control buttons. The product will turn on and will be ready to be used.



Select Source

Press Source button on the remote control. Then you can see the source list menu shown to the right.

Press Navigation Up/down button on the remote control to select the source and confirm by pressing Enter.

Input Source
DTV
ATV
AV
SCART
YPBPR
HDMI1
HDMI2
HDMI3
PC
USB
⬆ Move ⬇ Menu ⬇ Quit

Volume Control

Press VOL+ / VOL- button on the remote control to adjust the volume level.

Press MUTE button on the remote control when you need to mute the sound.



OSD Menu Operation

- Press **MENU** button on the remote control to access the OSD Menu. Pressing the same button again will move you backward in the OSD structure.
- Press **OK** button to confirm/select.
- Use **LEFT & RIGHT** buttons to navigate or change the parameters of the current sub-menu.
- Use **UP & DOWN** buttons to navigate in the OSD Menu.
- Press **EXIT** button to exit the OSD Menu.



 
OSD Menu Structure

- OSD (On Screen Display) allows users to control or adjust various features and settings in accordance with his/her preferences.
 - Press the **MENU** button on the remote control to see the main OSD menu.



OSD Menu Operation:

- **Main Menu:** Press the **MENU** button on the remote control to enter the main OSD menu. First, choose Main menu item you need with the buttons **◀ & ▶**. To select a Main menu items, just press **OK** button or Navigation button **▼** on the Remote Control.
- **Sub Menu:** Each menu item has its own sub menu items to set.
- **Sub Menu items:**
 - A: If there is no value to adjust it means there is a sub menu which you can access by pressing **OK** button and modify the menu values. Select sub-menu item with **▲ & ▼** buttons on the remote control and press Enter button to enter the submenu or change the value.
 - B: If there is no **▶** part, the item has adjustable values. Use the **◀ & ▶** buttons to adjust the values.
 - C: If the sub-menu item is grey colored, it means this item is not available in the particular mode.

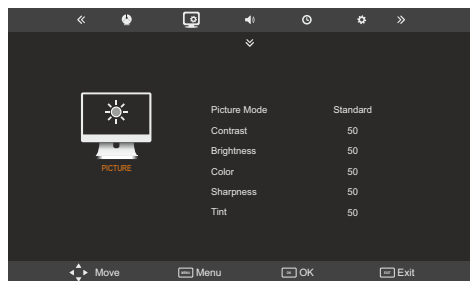

Menu > OPTION



In this Menu you can choose the setup settings for your product.

OSD Language

Choose the OSD language

Audio Languages 1st

Choose the first preferred audio language (for digital channels)

Audio Languages 2nd

Choose the second preferred audio language (for digital channels)

Subtitle Languages 1st

Choose the first preferred subtitle language (for digital channels)

Subtitle Languages 2nd

Choose the second preferred subtitle language (for digital channels)

OSD Duration

Options: 5/10/15/20/25/30/30/40 seconds

Choose the OSD Menu duration in time

Blue Screen

Options: Off/On

When is activated (ON) a blue screen will be displayed when no signal is received

Country

Choose your country to load predefined parameters matching your country

HDMI CEC

Options: Off/On

Activate CEC over HDMI

MEMC

Option: Off, Low, Middle, High.

Enhancement to compensate the difference between the screens refresh rate and program frame rate

Energy Mode

Options: Home/Max

Home mode will reduce the back light intensity in order to save energy

Max mode will increase the back light intensity to the maximum

Restore Settings

This function will restore the product to the default settings

Menu > Channel (DTV)



In this Menu you can search for TV-channels manually or automatically, manage the TV channels such as deleting, adding to favorites, skipping and locking. You can also use the PVR function which allows to record or time shift TV-programs

The TV model of this product is equipped with the following Tuners

 
Analog TV Tuner, supports Pal and Secam
DVB-T/T2, supports MPEG-4@H.264
DVB-C,supports 16,32,64,128 and 256-QAM
Supports H.264MP/HP@L4.1for SD and HD decoding

In this menu you can search for TV channels and manage them.

Antenna
Options: Air/Cable

Check with your Cable-TV service provider what system type is connected where the TV will be used. For DVB-T/T2 choose Air. For DVB-C choose Cable

Auto Scan

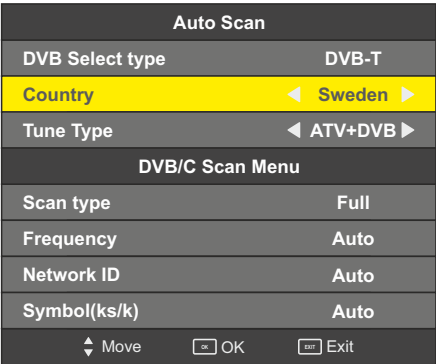

Use the Auto Scan menu to search for TV-channels. You can choose to search for ATV and

 
or DTV. If you care searching DVB-C channels and it is necessary to input the search parameters please input it in the relevant section.

Regardless which kind of searching you do, the found channels will be saved in the correspondent channel lists (DTV and ATV).

To access the DTV channels, press SOURCE button on the remote control and choose DTV from the source list, press then CH.LIST button on the remote to access the DTV channel list.


To access the ATV channels, press SOURCE button on the remote control and choose ATV from the source list, press then CH.LIST button on the remote to access the ATV channel list.

DTV Manual Tuning

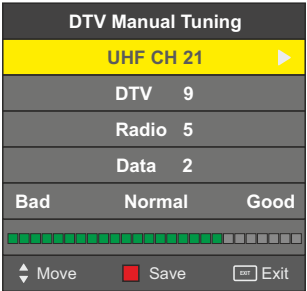

You can perform a manual channel search for digital channels (DTV). You will need to provide the information about Channel, Frequency and Bandwidth (in AIR mode) or Frequency, SymbolRate and Modulation (QAM) (In CABLE) mode.

 ATV Manual Tuning

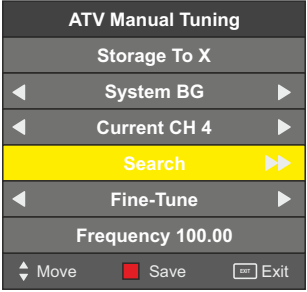

You can perform a manual channel search for analog channels (ATV). You can choose the channel you want to save to and also use Fine Tune to adjust the tuning for the channel to get better picture. You can also change the **Sound system** (BG, DK, I, L, L') for the channel.

Programme Edit

CH.NAME	SKIP	FAV	TYPE
0 C-05		♥	ATV
1 C-06	⊘		ATV
2 C-07			ATV
3 C-08			ATV
4 C-09			ATV
5 C-10			ATV
⬆ Move ◻ Select ◀ Back 🔴 Delete 🟡 Move 🔵 Skip 🟢 Rename ◻ FAV			

In **Program Edit Menu** you can:

Delete a channel (use Red button)

Move a channel (press Yellow button, choose new position, press Enter)

Skip a channel (use Blue button)

Rename a channel (press Green button, change the channel name using the arrow buttons)

Add a channel to favorites list (use FAV button)

Signal Information

Choose **Signal Information Menu** to display detailed information about the signal quality, strength and other details.

CI Information

Choose **CI Information Menu** to display detailed information about the Common Interface Module you have inserted in the CI-slot.

To watch paid channels, the "CI or CI+ CARD" must be inserted. If you don't insert the "CI or CI+ CARD," some channels will display the message "Scrambled Signal".

Software Update(USB)

Use to update the LED-TV firmware obtained from SWEDX

PVR File System

Use the **PVR File System Menu** to prepare your

PVR File System	
Select Disk	C:
Check PVR File System	Start
USB Disk	
Format	
Time Shift Size	
Speed	
⬆ Move ◻ Select ◻ Exit	

LED-TV to record DVB-T programs and use the Time Shift function. In order to record or time shift programs you need to connect a USB-memory or an Externa Hard Drive to your LED-TV.

The first time you connect a USB-memory or external hard drive you will need to format it in the PVR File System. All data on the USB-memory or external hard drive will be erased, therefore please backup any data before formatting in the PVR File System.

To access **PVR File System Menu** do the following

Press **Menu**. Choose **Channel Menu**

Press **Enter** or Move down with the down arrow

Choose **PVR File System** and press **Enter**

PVR File System	
Select Disk	C:
Check PVR File System	Success
USB Disk	Pass
Format	Pass
Time Shift Size	1 GB
Speed	HD Support 3432 KB/s
⬆ Move ◻ Select ◻ Exit	

Select Disk: Choose the disk you want to use

Check PVR File System: Choose to check the disk status and compatibility

USB Disk: It provides information if the disk is status

Format: Choose to format the disk. Two formatting standards are available, FAT32 and Hi Speed FS. You can also choose the PVR File System Size you want to format. After formatting the LED will report the estimated recording time for the formatted disk both for Standard Definition and High Definition recording and let you choose the Time Shift Size (see *Time Shift Function* for more information)

Record Start

 


Use the **Record Start Menu** to start recording a program. When you start the recording a menu will be displayed where you can control the recording and get information about the current recording time, max recording time and channel number and name. When you stop the recording the LED will save the recording to the disk. The file format for saving is .TS (MPEG-2 transport stream)



You can start the recording instantly by pressing the recording button on the remote control

Recorded List

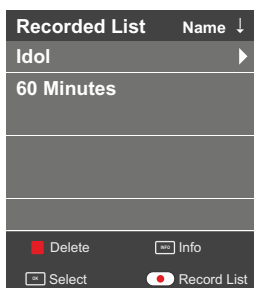

Use the **Recorded Start List Menu** to display a list of the recorded programs. The Recorded List

 
Pressing the RED button will delete the recorded program

Pressing Enter button will play the recorded program

Pressing Info button will display information about the recorded program such as date, time, duration, program title, channel name and program description

Pressing the Recorded List button will change the sorting. 3 types of sorting alternatives are available, by channel name, time and program title.

Recorded Mode

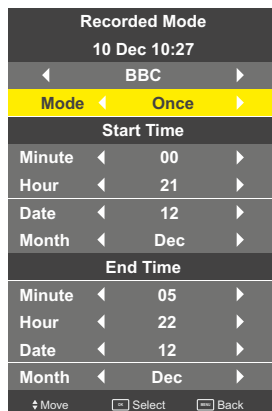

Use the **Recorded Mode Menu** to schedule recordings. In the Recorded Mode Menu you can choose the following

Channel to Record

Recording Mode: Once, daily, weekly, auto

 
Time to start the recording

Time to end the recording

All scheduled recordings will be listed in the recording list.

Note: You can turn off the LED-TV after scheduling the recordings. The LED-TV will execute the recording schedule while it is off. While recording the LED-TV's LED (power indicator) will flash.

Schedule List

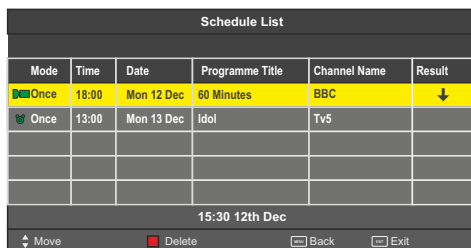

In the **Schedule List Menu** you can review the scheduled recordings and reminders

A reminder can be scheduled in the **EPG Menu**

Press the RED button to delete a recording or a reminder

EPG Function



The **EPG** (Electronic Program Guide) function displays the programs information. In this menu you can schedule a recording or a reminder.

Press the **GREEN** button to schedule a reminder. The LED will switch automatically to the scheduled program when the reminder is due.

Press the **RECORD** button to schedule a recording. The LED will switch automatically to the scheduled program and record it when the recording is due.

 
Time Shift Function



With the **Time Shift** Function you can pause a program while it is broadcasted and continue to watch it again at your convenience. The maximum time shift depends on the USB-memory or hard drive size.


To start the Time Shift while watching a program press the **PLAY/PAUSE** button to start the time shift, the LED will start recording the program and a menu indicating that is displayed. To continue watching the program press **PLAY/PAUSE** again and the LED will continue to play the program from where it was paused and a menu will be displayed where you can control different functions such as pause, fast forward and stop etc.

Menu > Picture

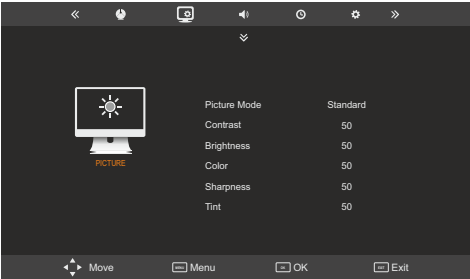

Use the Picture menu to adjust the picture settings to meet your requirements:

 Picture mode

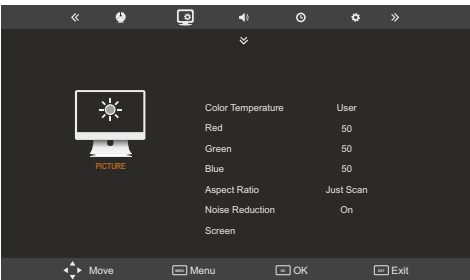

Choose between predefined settings:

Standard: Suitable for a normal room

Dynamic: Suitable for a bright room

Mild: Suitable for a dark room

User: In Personal mode you can adjust the Contrast, Brightness, Color, Sharpness and Tint to meet your own requirements.

Color Temperature

Choose between predefined settings (User, Cool, Medium, Warm). In User mode you can adjust the Colors Red, Green and Blue.

Aspect Ratio

 
Choose the desired Aspect Ratio. Available options are Auto, 4:3, 16:9, Zoom1, Zoom2, Panorama and Just Scan (1:1).

In PC Mode, only "16:9" and "4:3" mode can be adjusted.

Noise Reduction

Choose to activate noise reduction. Available options are On, Mild, Medium, High and Off. *If the broadcast signal received by your TV is weak, you can activate the Noise Reduction feature to help reduce any static and ghosting that may appear on the screen.*

Screen (only in PC mode)

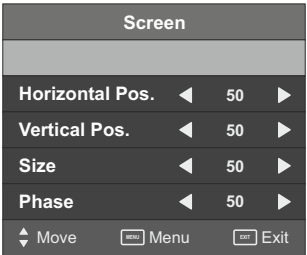

When the TV is in PC-Mode additional settings are available for PC-Setup.

 
Horizontal Pos.: Adjust the PC's screen positioning horizontally

Vertical Pos.: Adjust the PC's screen positioning vertically

Size: Adjust the screen size

Phae: Adjust the signal phase

Menu > Sound

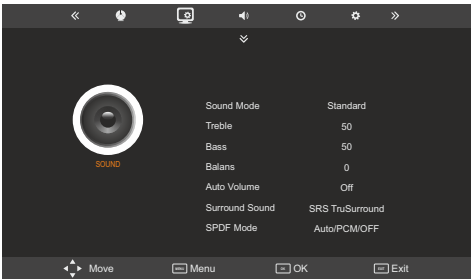

Use the Sound menu to adjust the sound settings to meet your requirements:

Menu > Sound > Sound Mode

Choose between predefined settings:

Standard: Suitable for normal programs

Movie: Suitable for movies

Sports: Suitable for sport programs

Music: Suitable for music program

User: In Personal mode you can adjust the Treble and Bass to meet your own requirements.

Balance

Adjust the sound output balance between left and right speaker.

Auto Volume

Each broadcasting station has its own signal conditions, and so it is not easy to adjust the volume every time the channel is changed. This feature lets you automatically adjust the volume of the desired channel by lowering the sound output when the modulation signal is high or by raising the sound output when the modulation signal is low.

 
Surround Sound

When ON it delivers a compelling, virtual surround sound experience through any two-speaker playback system, including internal television speakers. It is fully compatible with all multichannel formats.

SPDIF Mode

Choose the output mode for the SPDIF signal. Choose between Auto, PCM and Off.

Menu > Sound > EQ

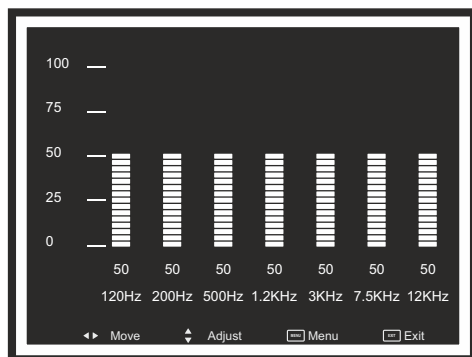

Choose the equalizers to do fine tuning for the audio output. *Not available in all models.*

Menu > Time



Use the Time menu to set the TV time and adjust some other settings related to time settings.

Clock

Adjust the time.

Off Time

Set a certain time to turn **off** the TV automatically. The available time intervals are **Once, Everyday, Mon-Fri, Mon-Sat, Mon-Sun** and **Sunday**.

On Time

Set a certain time to turn **On** the TV automatically. The available time intervals are **Once, Everyday, Mon-Fri, Mon-Sat, Mon-Sun** and **Sunday**.

When the Time On function is activated you can choose the following parameters

Source: Which source to be activated when the LED-TV turns on

Volume: Audio volume level when the LED-TV turns on

Sleep Timer

Set the TV to turn off after a certain time. The time intervals are **240, 180, 120, 90, 60, 30, 20** and **10 min.**

Auto Sleep

When set to ON the TV will turn off automatically if no input signal is detected otherwise the TV will remain ON even if no input signal is detected.

No Action Auto Standby

Options: Off/2/3/4/5/6 hrs

Define the time duration when the LED-TV will turn on after the last interaction.

Time Zone

 
Adjust the Time Zone according to GMT Standard.

Daylight Saving

Options: Off/On

Activate the Daylight Saving Time if it is applicable for your country (also called Summer Time).

USB Media Player

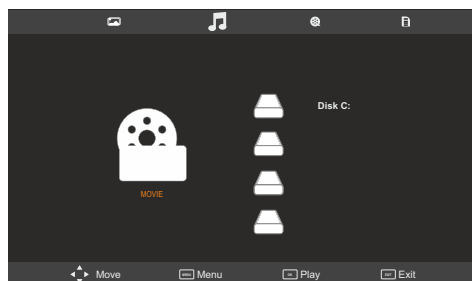

This product is equipped with high end USB Media Player. It is capable of playing music, movies (up to 1080p and with subtitle support), and display photos or text documents.

To Enter USB mode

Press Source

Choose USB

Press Enter

In USB mode you can choose between:

Photos: Enables you to display several formats of photos and images

Music: Enables you to play several formats of music and audio files

Movie: Enables you to play several formats of movies and video files

Text: Enables you to display TXT files

Remote Control Keys used in USB Mode

The INFO button will display available controllers where it is possible to i.e. rotate an image. The controllers may vary depending on the USB mode.

Navigation Key to navigate in the different position of the menu and press enter to activate the function.

The AUDIO button will alter audio track (if several audio tracks are available in the played file).

The SUB-T button will alter the subtitles or turn it off (if several subtitles languages are available in the played file).

The subtitle file should be saved in UNICODE In order to display the correct characters.

Functions



Repeat the file



Go to defined time position in the file



Repeat the file. Choose between ALWAYS, ONCE or NO REPEAT



Play audio files while displaying images



Display the Playlist



Display current file's information



Press to rotate 90 degrees CW



Press to rotate 90 degrees CW



Press to Zoom IN



Press to Zoom OUT



Press to MOVE in ZOOM mode



Define a part of a video to be repeated



Change aspect ratio



Play step forward in a video



Play slowly forward in a video

Supported file formats and codecs

The built-in media player (USB mode) supports the following file formats:

Video	Format	Video codec	Audio codec	Resolution	Frame Rate	Mbit/s	
	AVI	MJPEG	Mp3, WMA, AAC, Mp2, PCM	640x480	23.976~30	≤ 10Mbps	
		DIVX 3.11/DIVX4/DIVX5		1080p@30fps		≤ 10Mbps	
		XVID/MPEG-2/MPEG4/H.264				≤ 20Mbps	
	Mp4	MPEG-2/MPEG4/H.264				≤ 40Mbps	
	MOV	MPEG-4/H.264					
	MKV						
	MPG	MPEG-1/MPEG-2				≤ 20Mbps	
	TS VOB	MPEG2		720x576			
	ASF	VC1		1920x1080			≤ 16Mbps
	FLV			1920x1080			

Image	Format	Max resolution	Recommended resolution	Colors
	BMP	9600x9600 px	1920x1080 px	16, 256, 16 bit, 24 bit, 32 bit
	JPEG	8192x8192 px	1920x1080 px	
	PNG	3000x3000	1920x1080px	

Audio	MP3	
	WMA	WMA7, VMA8, VMA9 STD
	ADPCM, LPCM	
	MPEG1	Layer1,2
	AC3	
	AAC	HE-AAC
	CDDA	*.wav
	Realaudio8	LBR
	DD51	
	DDPlus	

All trademarks and registered trademarks are the property of their respective owners.

Text-TV / Teletext



Most television stations provide written information services via Teletext. The index page of the teletext service gives you information on how to use the service. In addition, you can select various options to suit your requirements by using the remote control buttons.

TTX ON

Press TTX ON to enter Text-TV
Press TTX ON to exit Text-TV

INDEX

Used to display the index (contents) page at any time while you are viewing teletext.

SIZE

Press to display the double-size letters in the upper half of the screen. For lower half of the screen, press it again. To display normal screen, press it once again.

REVEAL

Used to display the hidden text (answers to quiz games, for example). To display normal screen, press it again.

MIX

Press to activate teletext mode after selecting the channel providing the teletext service. Press it twice to overlap the teletext with the current broadcasting screen.

HOLD

Used to hold the display on a given page if the selected page is linked with several secondary pages which follow on automatically. To resume, press it again.

CANCEL

 
Used to display the broadcast when searching for a page.

Red/Green/Yellow/Blue

If the FASTTEXT system is used by a

broadcasting company, the different topics covered on a teletext page are color coded and can be selected by pressing the colored buttons. Press one of them corresponding to the required. The page is displayed with other colored information that can be selected in the same way. To display the previous or next page, press the corresponding colored button.

Product base assembly

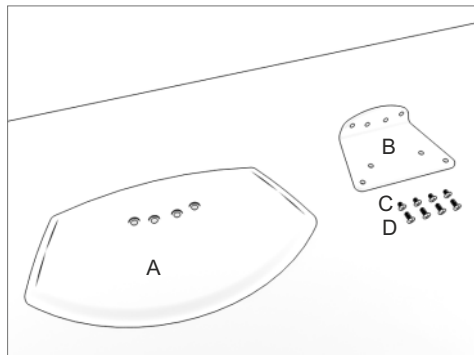


The product base contains the following parts

A. Wooden base




B. Metal part

C. M6 screw, 4 pcs, 10mm (Part No. 064-0178-00)

 D. M6 screw, 4 pcs, 16mm (Part No. 064-0147-00)

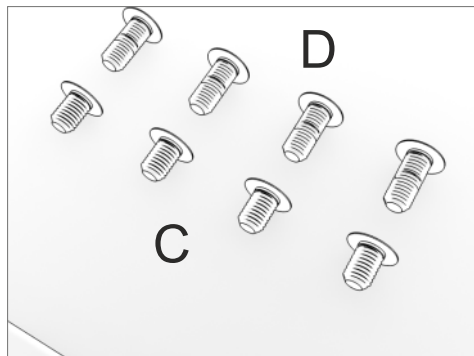

   Assemble the base with the LED-TV according to the following illustrations:

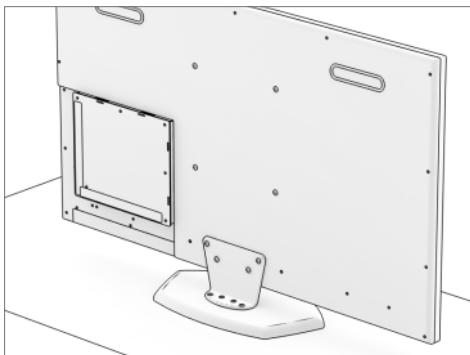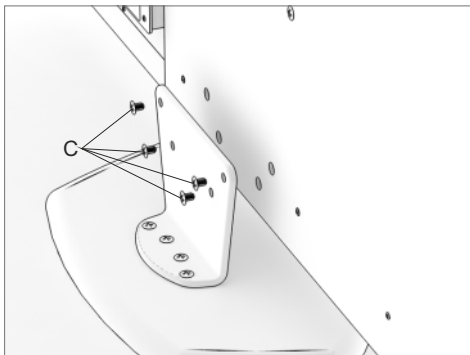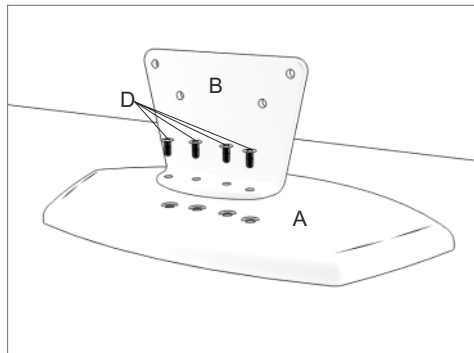

Wall mount assembly

SWEDX offers several wall mount devices which can be purchased from your dealer or www.swedx.com

 
Below is the Wall mounting parameters

Wall mount assembly


SWEDX offers several wall mount devices which can be purchased from your dealer or www.swedx.com

See the Wall mounting parameters in the illustrations


42 inch

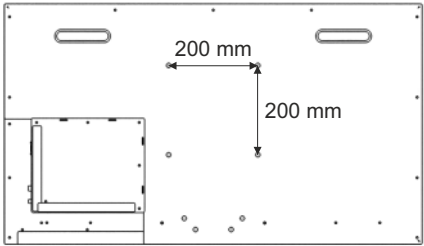


50 inch

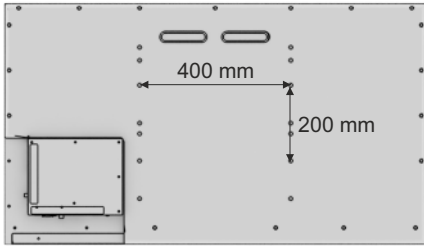 

58 inch

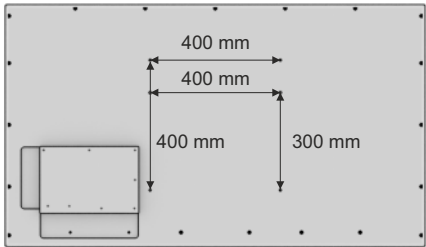 

65 inch

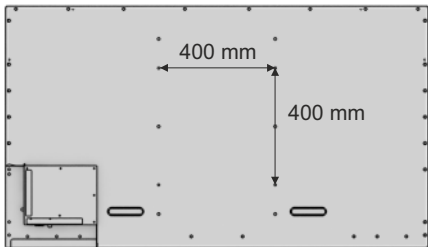 

Troubleshooting

Before contacting SWEDX service or your dealer, perform the following simple checks. If you cannot solve the problem using the instructions below, note the model and serial number of your product and contact your local dealer

No sound or picture

- Check that the mains lead has been connected to a wall socket
- Check that you have pressed the POWER button on the front of the TV
- Check the picture contrast and brightness settings
- Check the volume

Normal picture but no sound

- Check the volume
- Check whether the MUTE button has been pressed on the remote control

No picture or black and white picture

- Adjust the color settings
- Check that the broadcast system selected is correct

Sound and picture interference

- Try to identify the electrical appliance that is affecting the set and move it further away.
- Plug your set into a different mains socket

Blurred or snowy picture, distorted sound

- Check the direction, location and connections of your aerial
- This interference is often due to the use of an indoor aerial

Remote control malfunctions

- Replace the remote control batteries
- Clean the upper edge of the remote control (transmission window)
- Check the battery terminals
- Turn off the TV and unplug the AC cable from the wall socket and then plug the AC cable and turn on the TV

“No signal” message is displayed

- Check that the signal cable is firmly connected to the source input
- Check that the source is turned on

On PC mode, “Not Supported Mode” message is displayed

- Check the maximum resolution and the frequency of the video adapter. For HD models the recommended resolution is 1366x768 and for Full HD models the recommended resolution is 1920x1080 (for

PC mode). In HDMI mode the recommended resolution is 3840x2160@30Hz.

The image is too light or too dark

- Adjust the Brightness and Contrast

Pixel Mapping

- It is recommended to choose aspect ratio JUST SCAN to achieve pixel mapping in HDMI modes

Warranty and Service

The following terms apply only to new "in the original carton" SWEDX products marketed and distributed by SWEDX, which are purchased and used by the original consumer purchaser.

Depending on the model, your terms and conditions may be different from those shown below, and this information is subject to change without prior notice. Unless specifically stated otherwise, used and reconditioned products that are resold have no warranty from SWEDX and are considered sold "AS-IS", however, the selling dealer may offer additional service options.

Warranty for SWEDX products:

Check with your dealer for the warranty period.

What the warranty covers:

SWEDX warrants your SWEDX display(s) against defects in material and workmanship during the warranty period from SWEDX factory delivery date shown in the shipping documents. If a product proves to be defective in material or workmanship during the warranty period, SWEDX will, at its sole option repair or replace the product with a similar product, provided the purchaser adheres to certain return authorization procedures and guidelines. SWEDX reserves the right to charge customer in case of warranty conditions not are fulfilled.

Who the warranty protects:

This warranty is valid only for the first purchaser.

What the warranty does not cover:

1. Any product which the serial number has been defaced, modified or removed.
2. Damage, deterioration or malfunction resulting from:
 - A. Accident, misuse, neglect, fire, water, lightning, or other acts of nature, unauthorized product modification, or failure to follow instructions supplied with the product.
 - B. Repair or attempted repair by anyone not authorized by SWEDX.
 - C. Any damage of the product due to shipment.
 - D. Removal or installation of the product.
 - E. Causes external to the product, such as electric power fluctuations or failure.
 - F. Use of supplies or parts not meeting SWEDX specifications.
 - G. Normal wear and tear.
 - H. Any other cause which does not relate to a product defect.
3. Cosmetic damage by purchaser, such as markings, discoloration, scratches, dents, anti-theft devices markings, gouges or any

other defacement.

4. Physically damaged products by purchaser, such as broken PCB, Housing, damaged LED Module.
5. No Defect Found (product returned to SWEDX as defective but failure is not duplicated by SWEDX's test method.)
6. The product is not in accordance with the fault in the application
7. Timber is a lifelike natural material which can cause some little changes in the precision of the produced product such as small openings line beside the connecting point and some other small changes which are out of SWEDX control and don't make any effect for the product functionality.

Dead on Arrival (DOA)

If the product fails within the manufacturer's DOA period, a replacement product will be offered.

Before contacting us:

In many cases, your TV may not need repair. Before you contact us, please consult the troubleshooting section in your user's manual or SWEDX's FAQ web pages at <http://www.swedx.com> to see if you can easily remedy the problem yourself.

How to get service:

For information on obtaining warranty service, contact SWEDX dealer (the place where you bought your product) in first choice. If for any reason you can not contact your dealer, please contact SWEDX Customer Service by visiting <http://www.swedx.com>.

SWEDX technical support services:

During the period of product warranty, we support your basic configuration, setup and troubleshooting questions, and when required, we provide you with all instructions on how to return your product for repair. For support inquiries, please visit <http://www.swedx.com>.

SWEDX reserves the right to make final decisions regarding problem determination and the appropriate service option. Exchange units assume the remaining warranty of the original product. Please refer to your SWEDX Limited Warranty Statement for complete terms and conditions, as some models have other terms and conditions. Some limitations and restrictions apply and these programs are subject to change without prior notice.

Limitation of liability

If your SWEDX product fails to work as warranted above, your sole and exclusive remedy shall be repaired or replaced. SWEDX's maximum liability under this limited warranty is expressly limited to the lesser of the price you have paid for the product or the cost of repairing or replacement of any hardware components that malfunction in conditions of normal use. SWEDX is not liable for any damages caused by the product or the failure of the product to perform, including any lost profits or savings or special, incidental, or consequential damages. SWEDX is not liable for any claim made by a third party or made by you for a third party.

This limitation of liability applies whether damages are sought, or a claim made, under this limited warranty or as a tort claim (including negligence and strict product liability), a contract claim, or any other claim. This limitation of liability cannot be waived or amended by any person. This limitation of liability will be effective even if you have advised SWEDX.

SWEDX



www.swedx.com